



THE ULTIMATE CURVED STAIRLIFT

BY PLATINUM

ULTIMATE CHOICE

“The quality of the products,
the reliability and the after
sales service are absolutely
perfect.”

Platinum Stairlifts are based in the UK and manufactures all stairlifts at its state-of-the-art facility in Yorkshire. Platinum Stairlifts has been supplying high quality stairlifts since 1996, with every stairlift custom built to the needs of users and their homes.

We ensure the highest level of quality, safety, comfort and reliability. Every stairlift is tested in our factory to the highest standards prior to delivery and comes with a personalised signed certificate of quality.


ULTIMATE STAIRLIFT

Many claim to be the best but only we are confident enough to name it as such.

Unique to the market: The Ultimate 'First Step Smart Start'. It's a simple, tidy, and reliable solution to avoid an intrusive rail or a costly hinge at the foot of the stairs.

Throughout the development of the Ultimate, choice was a large aspect of the stairlift experience. Having adjustable arms, backrest and footrest with inter changeable arm controls creates an Ultimate experience that suits your wants and needs.

FIRST STEP SMART START

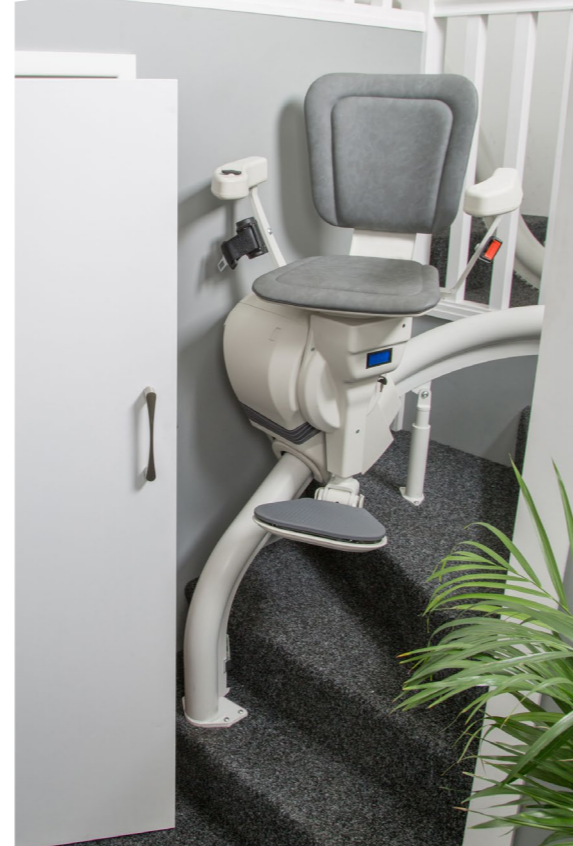

HEAVY DUTY OPTION UP TO
160KG • 25ST • 352IBS

ADJUSTABLE
ARMS AND BACK

INTERCHANGABLE
CONTROLS



ULTIMATE JOURNEY



STEP 1

Lower the arms and the seat pad, which is linked to the footplate. Ensure the safety belt is fastened.

STEP 2

Press the rocker or push the joystick depending on your chosen control in the direction you want to go.



STEP 3

Sit back and enjoy the Ultimate journey, taking your freedom to the next level!



STEP 4

At the top of the stairs, use the side-mounted swivel lever to turn the chair or wait for the powered swivel to turn itself, and safely step off.

STEP 5


Once finished, fold up the arms and the seat, which will fold up the footrest.



**“The Ultimate experience is exactly that.
It has changed lives for the better”**

ULTIMATE FEATURES


The ergonomic seat by Platinum is one of the most advanced stairlift chairs available. Designed with the user in mind the seat comes with a wealth of built-in features.

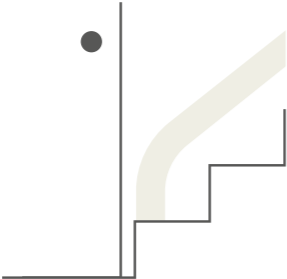

First Step Start




120kg weight capacity with 160kg Heavy duty option

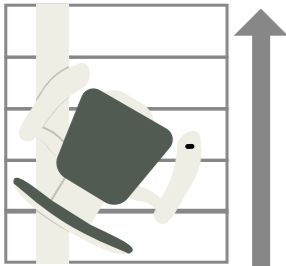


Upward facing travel




75° incline

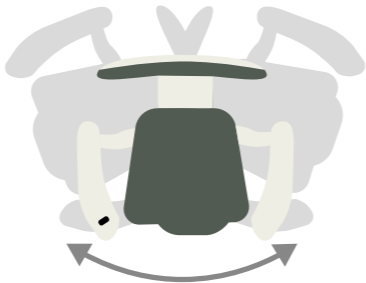


Two way power swivel available

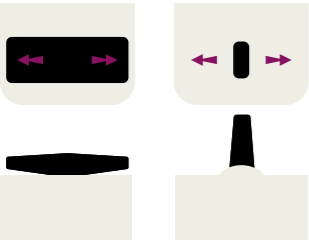

Choice of controls

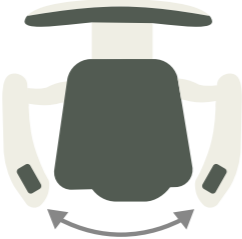

Interchangeable controls

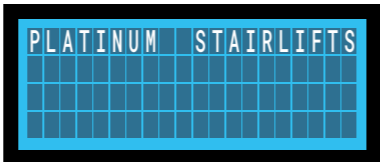

Digital display

LINKED SEAT & FOOTREST

MANUAL OR POWERED SWIVEL

VERTICAL START

ULTIMATE RAIL

The Ultimate is now an option for staircases previously unsuitable to fit stairlifts.

Clearing lower bulkheads and saving space on steep staircases, the Ultimate is the solution to many problems faced when fitting a stairlift.

A rail angle up to 75° and multiple bend radii (210mm to 500mm) allow the Ultimate rail to be designed to fit perfectly to the stairs.

**The diameter of
the tube is 80mm.
Actual Size**



ULTIMATE RAIL

Starting options



Standard Start

The rail starts on the landing before the stairs.



First Step Start

Removes the need for the rail to intrude onto the landing.

Finishing options



Standard Finish

The rail can continue on the landing.



Flush Finish

The rail can finish when the steps do.

Start and Finish options

Wrap Short, 90° or 180°

The wrap option can be used at both the top and bottom of the journey. Allowing the stairlift to wrap fully around the bannister, at a 90° turn to follow the wall or a tight turn.



ULTIMATE CHAIR


Choice is the important factor in this chair design. Adjustable arms and backrest allow the chair to fit you perfectly, maximising comfort. With a heavy duty option, the Ultimate will accommodate needs that other stairlifts cannot.

Enhancing the experience further; we have taken reassurance to the next level with a digital display for real time diagnostics on your stairlift.

UPHOLSTERY COLOURS



CUSTOM COLOURS AVAILABLE


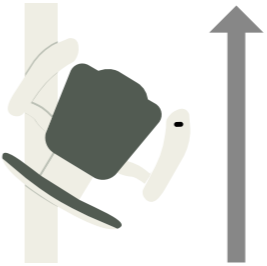


Upward Travel

Another industry first for The Ultimate is the upward facing travel. Allowing the user to face up the stairs while travelling. Not available with the first step start.



ULTIMATE MEASUREMENTS

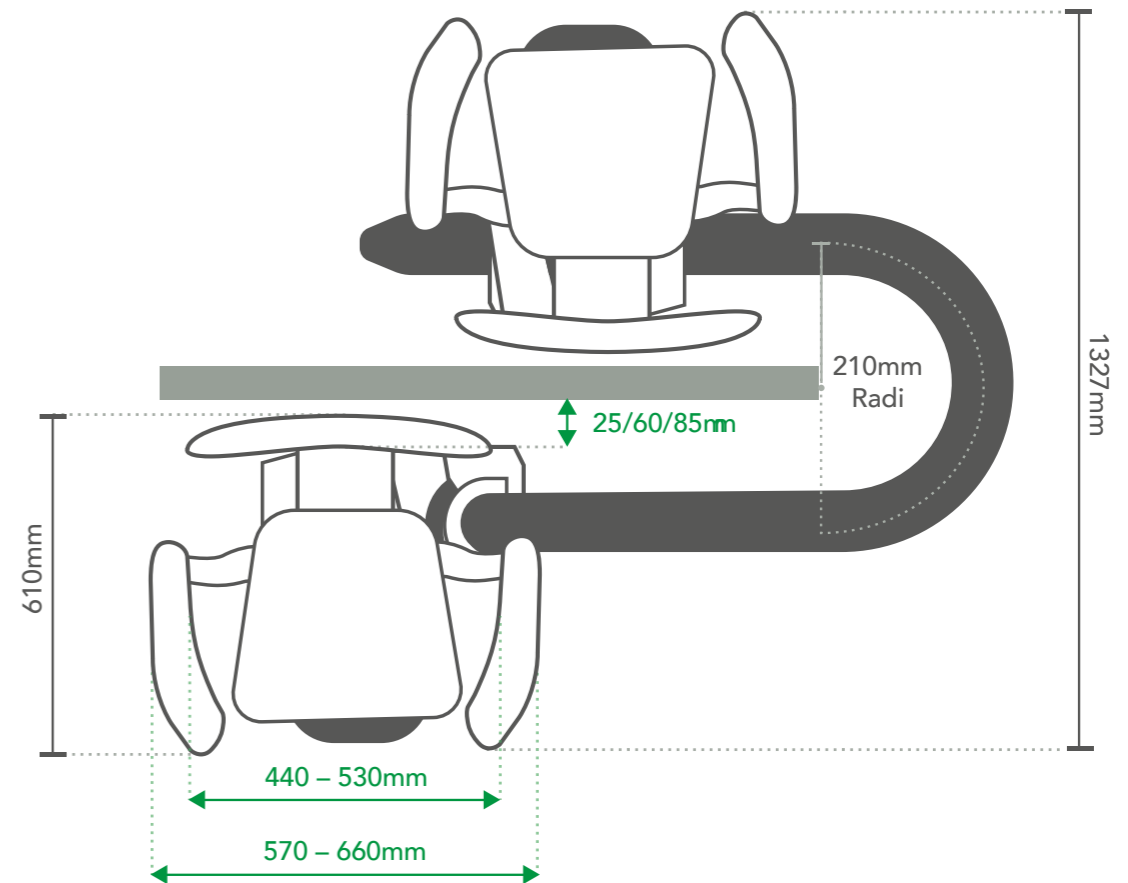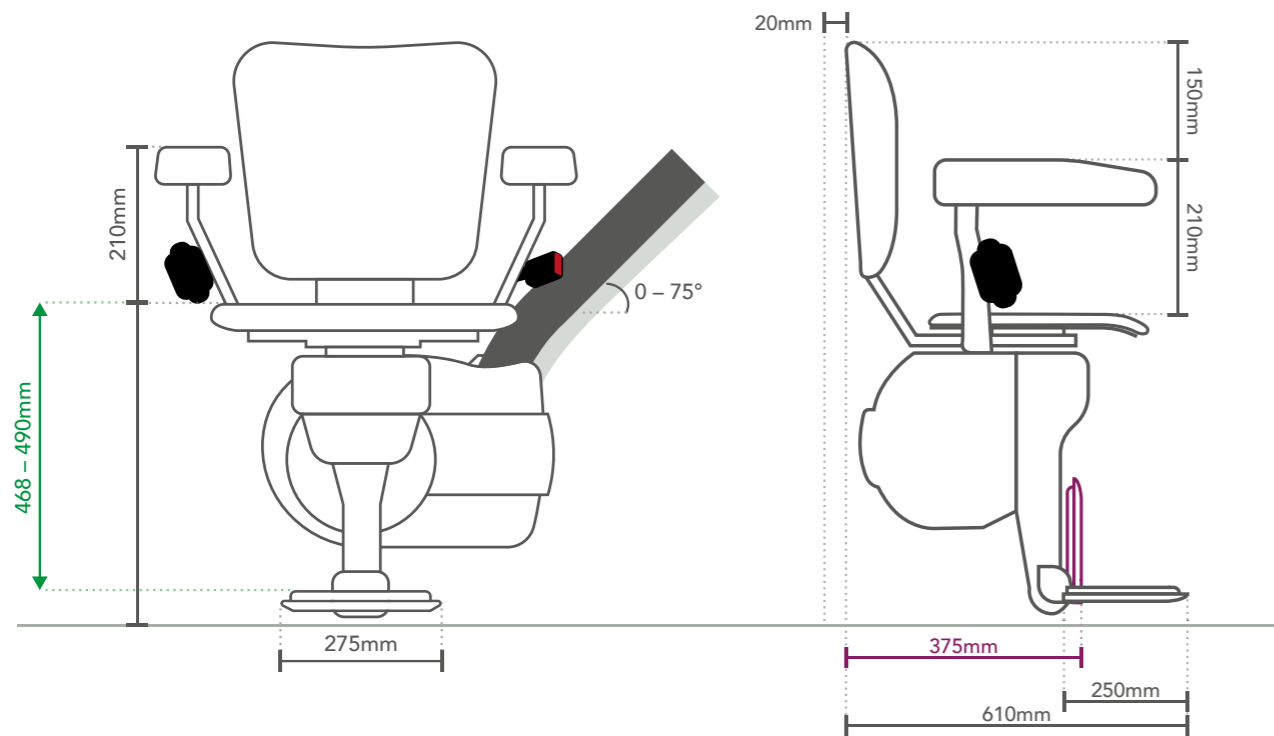



Obam Lift Services Ltd

Tillbridge Lane
Sturton-by-Stow
Lincoln
LN1 2BP

Tel: 01427 787532

www.obam.co.uk

"The best seat in the house"

Independently tested and
certified to comply with
BS EN 81-40:2008 and
Euro Pat App 3 478 618

Platinum Stairlifts
Crosshills, Keighley
West Yorkshire
BD20 7BW